









ower

.ower



Chair Position

We at CURA SEATING would like to thank you for choosing the CURA Rise & Recliner.

We hope that you enjoy the comfort and benefits that your chair has to offer.

Please follow the instructions to see how to operate the chair. You will find in the blue sections how to adjust the chair sizes and features.



Lift to Stand









Backrest Recline

Legrest









100870 242 1358



Adjustable Seat Depth (Option)

You can change the seat depth from 17" to 21". To change the seat depth, lift the velcroed down skirt up at the back of the chair and you will see the brake lever on the backrest bar. Hold the lower bar with your left hand and squeeze the brake lever bar with your right hand and push the lever bar forwards or pull it backwards to the persons required seat depth. You will here the back rest click into place.



Removable Pressure Relief (Option)

To remove the pressure cushion lower the backrest to allow you to get access to the back of the overlay which is velcroed down.

Lift up the velcro and then remove the cushion. The cushion is also velcroed down.

You can insert another cushion if you wish and pull the overlay back down over the velcro at the back and bring the chair backrest back up.



Angle of lift (Option)

The angel of lift the chair raises from can be modified to help with the angel of lift you require.
This can only be changed by CURA SEATING or a local CURA SEATING supplier.





Only available on 18" floor to seat









Raise the Arm at a Touch of a Button









Eletric Lift Up Arm (Option)

When transferring from wheelchair into the chair have the top of the chair's seat surface 1" Lower. When transfering from the chair into the wheelchair have the top of the wheelchair's seat surface 1" Lower.

